

## Multi-Function Power Handle - OC100 -




## User Manual

Please read and keep this User Manual  
to ensure safe and reliable operation

### Battery Care

- When your OneClik™ Power Handle is new, please unscrew the end tail-cap, remove the plastic safety tag from the battery, replace the tail-cap securely, then fully charge the battery prior to first use.
- To charge the battery, connect the supplied USB cable to the charging port, then connect the other end of the cable to a suitable USB outlet (5v) - You can use any standard USB power adapter / phone charger / PC USB output. (Average recharge time approx. 4hrs - 6hrs)
- The Charging Indicator will show red while charging, blue when fully charged.
- If the Power Handle is likely to be stored unused for a prolonged period, the battery should be removed and stored safely away from other metallic objects.
- When re-fitting the battery, ALWAYS ensure that the positive (+) end is inserted first into the Handle (see below).
- DO NOT**
  - Use the Power Handle while it is being charged.
  - Charge the battery or use the Power Handle if the battery or the Power Handle has been damaged.
- NEVER**
  - Short circuit the battery
  - Modify / cut / puncture / damage the battery.

*These batteries can contain a lot of energy, and can cause severe injury and burns if misused / mishandled!*

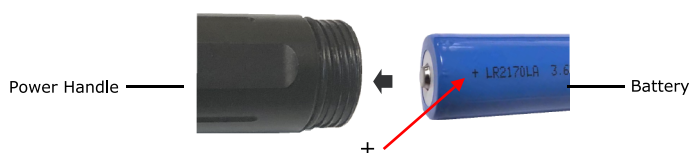

### Mounting / Removing Accessories

- A diverse range of Accessory Heads are available. They all share a common, patented, OneClik™ fitment system.
- To fix an Accessory Head**  
simply insert the Accessory Head foot into the OneClik™ Lock Ring and push the Accessory Head and the Power Handle together until the Lock Ring clicks into its locked position.
- To remove an Accessory Head**  
hold the Accessory Head in one hand, while pulling down on the OneClik™ Lock Ring with the other hand.  
**Caution:** The connection is spring loaded, so the Accessory Head will eject itself from the Power Handle as soon as the Lock Ring is pulled down.

### Troubleshooting

- If the charging lamp is blinking alternate red / blue, this indicates a charging fault. Re-insert the battery and ensure that the end tail-cap is secure. Replace the charging cable if it shows signs of damage.
- If the attached Accessory operates erratically or light blinks intermittently, check that the end tail-cap is secure.

### Operation

- The Press Switch has **two basic functions**:
  - To turn on / off**  
simply hold the button in for 2 seconds.
  - To adjust the power mode**  
press the button briefly. The modes will be cycled in sequence: High / Mid / Low power modes.
- The Press Switch also has **two advanced lighting functions**:
  - Double press the button briefly to enter into strobe mode. Briefly press the button once to exit this mode.
  - Triple press the button briefly to enter into SOS mode. (The attached lamp accessory will flash a Morse coded SOS sequence). Briefly press the button once to exit this mode.
- Memory feature: the Power Handle will remember the operating mode that was in use before power off, and will re-enter that mode when powered back on.

### Accessory Heads


- See reverse for details.

At the end of product life dispose this product  
only via a licensed recycling centre.



## Zoom Torch Head

- OC100L01Z -

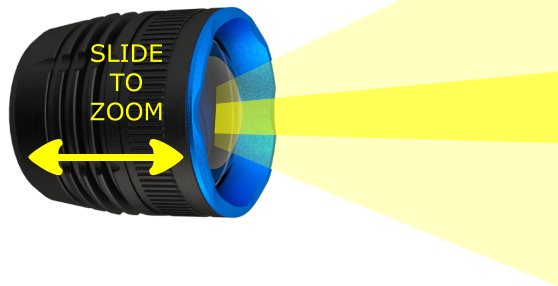

- **This Accessory Head supports multi power levels**  
See reverse for OneClik™ Power Handle Operation instructions.

Power Mode	LOW	MID	HIGH
Lumen	110 lm	350 lm	700 lm
Approx Runtime	12hrs	5hrs	2.5hrs

- **Caution:**
  - The Head may become HOT during prolonged use. Switch OFF and allow to cool before handling it.
  - DO NOT shine flashlight directly at eyes.

## Floodlight Head

- OC100L02 -



- **This Accessory Head supports multi power levels**  
See reverse for OneClik™ Power Handle Operation instructions.

Power Mode	LOW	MID	HIGH
Lumen	200 lm	500 lm	1,000 lm
Approx Runtime	8hrs	3hrs	1.5hrs

- **Cooling**  
This item includes automatic internal cooling fan

- **Caution:**
  - DO NOT shine floodlight directly at eyes.

## Flexlight Head

- OC100L03 -



- **This Accessory Head supports multi power levels**  
See reverse for OneClik™ Power Handle Operation instructions.

Power Mode	LOW	MID	HIGH
Lumen	90 lm	150 lm	200 lm
Approx Runtime	16hrs	8hrs	6hrs

- **Caution:**
  - The Head may become HOT during prolonged use. Switch OFF and allow to cool before handling it.
  - DO NOT shine flexlight directly at eyes.

## Camping Lantern

- OC100L05A -



- **This Accessory Head supports multi power levels**  
See reverse for OneClik™ Power Handle Operation instructions.

Power Mode	LOW	MID	HIGH
Lumen	90 lm	200 lm	300 lm
Approx Runtime	12hrs	6hrs	3hrs

- **Caution:**
  - The Head may become HOT during prolonged use. Switch OFF and allow to cool before handling it.